



TOLL FREE (CANADA AND US): 844.907.7700
 P 248.817.8900 F 248.282.2444
 A 2844 Livernois Rd, Suite 685 W BluVand.com
 Troy, MI 48099-0685 NoShark.com

KEEP ORIGINAL BOX AND ALL PACKAGING MATERIALS FOR WARRANTY REPAIRS OR RETURNS.

NO SHARK USER GUIDE

Surf Unit Also Available with custom leash attachment

Please read and fully understand the WARNINGS/Warranty/Disclaimer section at the end of this guide before doing anything further with your NoShark device.

Step 1: Charge the NoShark device battery. Unscrew the barrel connector and charge the NoShark device with the supplied power adapter. The LED blinks red while charging and turns green when completely charged. Reconnect the barrel connector, but do not over tighten.

Step 2: Attach the NoShark device to your ankle. Position the enclosure to the outside of your body pointing away from your other ankle. The LED should be visible on your ankle when looking down at the device.

Step 3: Ready for use. The NoShark device is salt water contact activated. The LED blinks green when signals are being emitted. **DO NOT TOUCH THE HIGH VOLTAGE ELECTRODES.**

Step 4: Rinse off the NoShark device with fresh water after each use to reduce electrode and other metal part corrosion. **FAILURE TO RINSE WITH FRESH WATER AFTER EACH USE WILL VOID WARRANTY.**

CAUTION: Never use a damaged or worn device. Please read this user guide completely for other warnings and precautions.

Your NoShark device emits electrical pulses. Sensitivity to these pulses varies from person to person. You may not experience any sensation or you may feel pulses around your ankle. Do not touch the probes or handle your NoShark device while it is activated (submerged in water). Only attach and detach your NoShark device while it is deactivated (out of the water).

LED INDICATOR

Blinking Red – battery charging

Green – battery charging complete

Blinking Green – When submerged in salt water, the NoShark device is activated. Electrodes are emitting high voltage pulses.

Blinking Amber – battery is getting low and has approximately 30 minutes to 1 hour of charge left from the moment the LED begins blinking amber.

CAUTION: If the LED turns on or blinks abnormally or unexpectedly, do not attempt to charge or use your NoShark device. Call or email NoShark product support.



Figure 1 - Status LED

CHARGING YOUR NO SHARK DEVICE

Allow at least 8 hours to charge your NoShark device. A new, fully charged unit will provide approximately 6 hours of in-water usage. Unscrew the barrel connector (Fig. 2) plug in the power adapter into the barrel connector of the NoShark device (Fig. 3) after selecting the proper prongs for your power adapter (Fig. 4) then plug the power adapter into a standard wall outlet. The LED blinks red while charging and turns green when completely charged. Unplug the power adapter from the NoShark device and the wall and reconnect the barrel connectors on the NoShark device, but do not over tighten. Hand tighten the barrel connector until snug. You will see a momentary LED flash each time you connect the barrel connectors, indicating the current level of battery charge.

CAUTION: Do not unscrew the barrel connectors around water or sand. If you do, make sure to rinse them and let them dry. Avoid getting liquid inside the tips of the barrel connector.

Do not attempt charging while the area surrounding the power jack is wet or can be subjected to water. Only use the supplied power adapter to charge your NoShark device.

Please note all batteries have a finite life time. Charging times and usage time will vary as the battery ages and is charged and discharged.

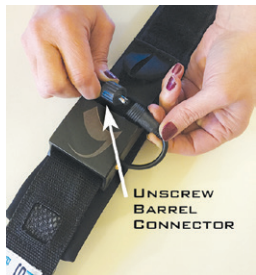


Figure 2 – Barrel Connector



Figure 3 – Battery Charging



Figure 4 – Power Adapter

USING YOUR NO SHARK DEVICE

The NoShark device is activated when submerged in salt water. The LED will blink green when the NoShark device is emitting high voltage electrical signals. Strap the device to your left or right ankle with the enclosure positioned to the outside of your body (pointing away, 180 degrees, from your other ankle). The LED should be positioned upward. The LED will stop blinking green and begin to blink amber when it has less than an hour of power left. When the battery is almost completely discharged, it will blink red.

The NoShark device may blink red and then green when charging, if the battery has not fully discharged.

CAUTION: The NoShark device emits high voltage pulses. Do not touch the electrodes (Fig. 5) at any time. Do not connect a wire or any other conductor from one electrode to the other. Do not attempt to activate the device by any means other than submerging it into salt water. Do not use your NoShark device if any part of it is worn or damaged. Your NoShark device is powered by an internal sealed battery that is not serviceable. Replace your NoShark device if the operational time becomes too short for your needs.

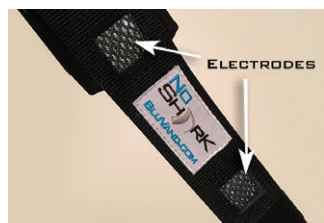


Figure 5 – Electrodes
DO NOT TOUCH AT ANY TIME

CARING FOR YOUR NO SHARK DEVICE

Rinse your NoShark device off with fresh water after each usage to reduce corrosion of the electrodes and other metal parts.

ADDITIONAL TECH SUPPORT

Visit: www.NoShark.com - FAQ Section

SPECIFICATIONS

Depth: 150 feet maximum

Dimensions: Approximately 2.7" wide X 1.5" deep X 2.2" long

Weight: Approximately 7 oz.

Power: Internal 3.7V Li-ion battery

Battery Charger: 5 VDC, 1.0 Amp wall transformer

Charging Time: Approximately 8 hours (new battery, varies over time)

Operational Time: 6 hours (in water)

Output: 120V to 200V pulsed proprietary waveform

Electrodes: 2 electrodes, each approximately 1" x 1" stainless steel mesh

WARNINGS/WARRANTY/DISCLAIMER

READ AND FOLLOW ALL NOSHARK DEVICE OPERATING INSTRUCTIONS AND ALL MANUFACTURER SPECIFICATIONS, INSTRUCTIONS, ADVICE AND REQUIREMENTS FOR USE OF THIS EQUIPMENT BEFORE EACH USE OF THE NOSHARK DEVICE.

USE THE NOSHARK DEVICE ONLY IN THE OCEAN OR OPEN WATER WAY. DO NOT ATTEMPT TO USE THE NOSHARK DEVICE IN A SWIMMING POOL OR OTHER CLOSED ENVIRONMENT. IF YOU HAVE ANY HEALTH CONDITION SUCH AS A PACEMAKER, EPILEPSY, PREGNANCY, OR HEART DISEASE, CONSULT WITH YOUR PHYSICIAN BEFORE USING THE NOSHARK DEVICE AS THERE MAY BE RISK TO YOU FROM USING THE NOSHARK DEVICE DUE TO THE ELECTRONIC NATURE OF THE DEVICE. USE ONLY MANUFACTURER RECOMMENDED COMPATIBLE COMPONENTS.

EXAMINE AND REPLACE ANY DEFECTIVE, WORN OR DETERIORATED COMPONENT PARTS OF THE NOSHARK DEVICE. EXAMINE ALL GEAR AND EQUIPMENT, INCLUDING ALL FITTINGS, BUCKLES, SNAPS, OR OTHER FASTENERS BEFORE EACH USE OF ANY NOSHARK DEVICE PRODUCT. USE ONLY THOSE PRODUCTS DESIGNED FOR NOSHARK DEVICE USE.

DO NOT EXCEED RECOMMENDED OR STATED FACTORS REGARDING SAFE USE OF THE NOSHARK DEVICE. READ AND FOLLOW ALL WARNING LABELS, MANUALS, INSTRUCTIONS, TRAINING OR EXPERIENCE REQUIREMENTS AND RECOMMENDATIONS AND ALL RECOGNIZED NOSHARK DEVICE USE PROCEDURES ON EVERY OCCASION WHEN YOU WILL BE USING THE NOSHARK DEVICE.

CHECK AND CONFIRM THAT ALL BATTERIES ARE SUFFICIENTLY CHARGED BEFORE EACH USE OF THE NOSHARK DEVICE.

BE EXTREMELY CAREFUL AND CAUTIOUS. REVIEW EMERGENCY PROCEDURES BEFORE EACH USE. DO NOT BE OVERCONFIDENT OR INATTENTIVE CONCERNING YOUR ACTIVITY IN THE WATER. NEVER ATTEMPT TO USE EQUIPMENT PACKED, PREPARED, ASSEMBLED OR FITTED BY OTHERS. KNOW AND EXAMINE YOUR EQUIPMENT BEFORE EACH USE.

FAILURE TO READ AND FOLLOW ANY OF THE FOREGOING INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH.

PARTICIPATION IN WATER SPORT ACTIVITIES, IN PARTICULAR OCEAN ACTIVITIES SUCH AS SNORKELING OR DIVING MUST BE CONSIDERED AS PRESENTING A HIGH DEGREE OF RISK FOR A PARTICIPANT WHETHER THE PARTICIPANT MAKES USE OF THE NOSHARK DEVICE SYSTEM OR NOT.

SHARKS ARE NATURAL MEAT EATING PREDATORS THAT MUST BE CONSIDERED EXTREMELY DANGEROUS IN ANY ENCOUNTER. THEY ARE UNPREDICTABLE ANIMALS AND MUST ALWAYS BE TREATED AS PREDATORS WITH EXTREME RESPECT AND CAUTION.

FEEDING SHARKS UNDER ANY CIRCUMSTANCES IS DISCOURAGED. THE NOSHARK DEVICE OR ANY OTHER DEVICE MAY BE RENDERED USELESS DUE TO THE FRENZIED ENVIRONMENT CREATED THROUGH FEEDING SHARKS.

WE MAKE NO GUARANTEE THAT SHARKS WILL BE DETERRED BY THE NOSHARK DEVICE. THE NOSHARK DEVICE WILL NOT PROVIDE ANY PROTECTION FOR THE USER FROM ANY OTHER TYPE OF FISH OR MARINE ANIMAL.

THE NOSHARK DEVICE HAS BEEN TESTED TO A DEPTH OF 150 FEET BELOW THE WATER SURFACE. DO NOT ATTEMPT TO USE NOSHARK DEVICE AT ANY DEPTH DEEPER THAN 150 FEET.

WE WARRANT TO YOU ONLY, SUBJECT TO THE LIMITATIONS AND DISCLAIMERS SET FORTH HEREIN, THAT THE NOSHARK DEVICE COVERED HEREBY SHALL BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIALS AND SHALL CONFORM TO SPECIFICATIONS IDENTIFIED IN OUR ORDER ACKNOWLEDGEMENT AND AGREED IN WRITING BY US, IF ANY, FOR A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE. THE FOREGOING WARRANTY IS CONDITIONED UPON (1) PROPER MAINTENANCE AND NORMAL USE, INCLUDING, WITHOUT LIMITATION, IN CONFORMITY WITH INSTRUCTIONS FURNISHED BY US FROM TIME TO TIME, IF ANY, AND (2) THE NOSHARK DEVICE NOT HAVING BEEN SUBJECT TO MISUSE, NEGLIGENCE OR ACCIDENT OR TO ALTERATION, IMPROPER ASSEMBLY MODIFICATION, REPAIR, IMPROPER TESTING, HANDLING, USE OR SOLDERING IN ANY RESPECT WHICH, IN OUR JUDGMENT, ADVERSELY AFFECTS THE CONDITION OR OPERATION OF THE NOSHARK DEVICE. OUR SOLE OBLIGATION TO YOU HEREUNDER, AND YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF WARRANTY, SHALL BE, AT OUR DISCRETION, TO REPAIR OR REPLACE THE NONCONFORMING DEVICE OR ISSUE YOU A CREDIT FOR THE PURCHASE PRICE OF THE NONCONFORMING DEVICE, WHERE WITHIN THE WARRANTY PERIOD: (A) WE HAVE RECEIVED WRITTEN NOTICE OF NONCONFORMITY AND (B) WE HAVE DETERMINED THAT THE PRODUCT IS NONCONFORMING AND THAT SUCH NONCONFORMITY IS NOT A RESULT OF MISUSE, MISHANDLING, NEGLIGENCE, ACCIDENT, IMPROPER ASSEMBLY, MODIFICATIONS, SOLDERING OR OTHER MISUSE.

THE FOREGOING LIMITED WARRANTY AND REMEDIES ARE EXCLUSIVE AND ARE MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR USE AND NON-INFRINGEMENT. FOR THE AVOIDANCE OF DOUBT AND NOTWITHSTANDING ANY PROVISION TO THE CONTRARY, WE MAKE NO REPRESENTATIONS, WARRANTIES OR GUARANTIES WHATSOEVER REGARDING WHETHER THE NOSHARK DEVICE WILL DETECT A SHARK, PREVENT A SHARK ATTACK, OR OTHERWISE PROTECT ANY PERSON FROM SHARKS GENERALLY, AND WE EXPRESSLY DISCLAIM ALL DAMAGES OF ANY KIND RESULTING FROM SUCH EVENTS. SHARKS ARE NATURAL, UNPREDICTABLE PREDATORS AND MUST BE CONSIDERED EXTREMELY DANGEROUS IN ANY ENCOUNTER. WE NEITHER ASSUME NOR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR US ANY OTHER WARRANTY OR LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION OR USE OF THE NOSHARK DEVICE AND WE MAKE NO WARRANTY WHATSOEVER FOR PRODUCTS NOT MANUFACTURED BY US. WE SHALL NOT BE LIABLE FOR DAMAGES DUE TO DELAYS IN DELIVERIES OR USE. NOTWITHSTANDING ANYTHING SET FORTH HEREIN AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, IN NO EVENT SHALL WE BE RESPONSIBLE OR LIABLE TO YOU, YOUR CUSTOMERS, OR TO ANY OTHER PERSON, FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, CONTINGENT OR PUNITIVE DAMAGES OF ANY KIND, WHETHER ARISING FROM CONTRACT (FOR EXAMPLE, IN CONNECTION WITH ANY BREACH OF WARRANTY OR OTHER BREACH OF OUR OBLIGATIONS HEREUNDER), TORT OR NEGLIGENCE, INCLUDING BUT NOT LIMITED TO ANY LOSS OF PROFITS OR GOODWILL OR OVERHEAD OR LIKE DAMAGES, AND OUR AGGREGATE LIABILITY FOR ANY DAMAGES OR CLAIMS ARISING OUT OF OR RELATING IN ANY WAY TO THE NOSHARK DEVICE SHALL IN NO EVENT EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT(S) GIVING RISE TO THE CLAIM OR DAMAGES. YOU WAIVE ANY CAUSES OF ACTION OR THEORIES OF LIABILITY INCLUDING, BUT NOT LIMITED TO, THOSE ARISING UNDER CONTRACT, TORT, STRICT LIABILITY, PRODUCT LIABILITY, STATUTES OR OTHERWISE, EXCEPT AS SPECIFICALLY PROVIDED BY THE UCC AS MODIFIED AND LIMITED HEREIN. YOU FURTHER WAIVE ANY RIGHT OF IMPLIED CONTRACTUAL OR COMMON LAW INDEMNITY AGAINST US FOR ANY CLAIM, INCLUDING, BUT NOT LIMITED TO, LIABILITY FOR CLAIMS FOR DAMAGES TO PERSON OR PROPERTY ARISING OUT OF THE USE OF PRODUCTS SOLD TO YOU HEREUNDER.

See Website for COMPLETE Terms and Conditions

MADE IN THE USA • © 2015 BluVand Innovations, LLC